



HANDLE
(type 296)

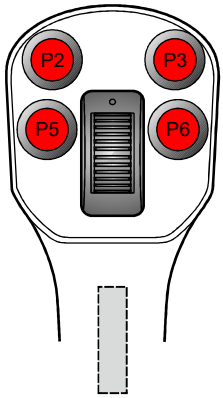

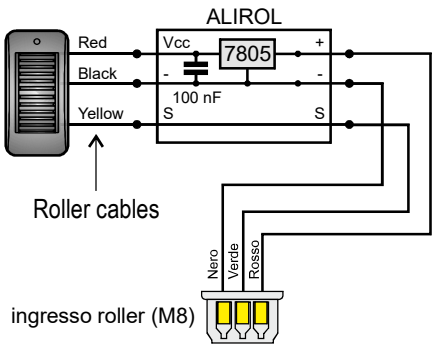


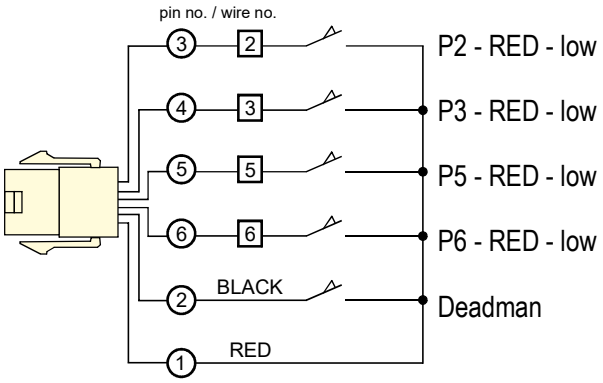

CABLE
(type 004)

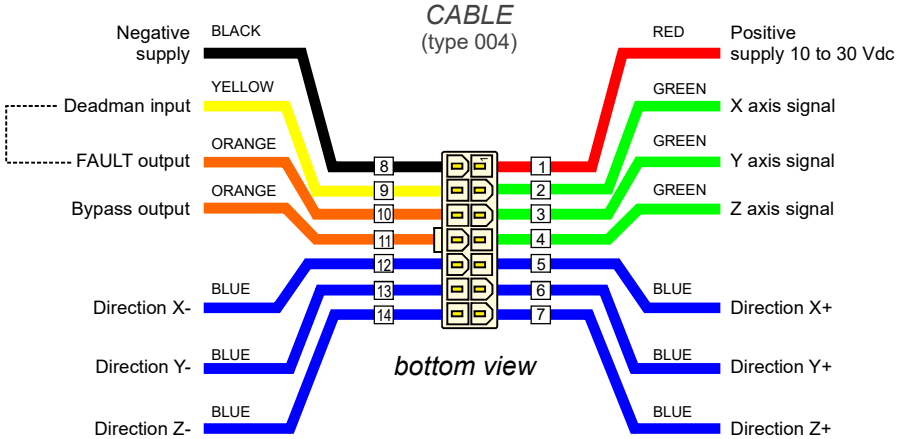


NOTE: to enable joystick, connect FAULT output (orange wire - pin 10) with Deadman Input (yellow wire - pin 9); you can also add external push button to ensure more safety to the system.

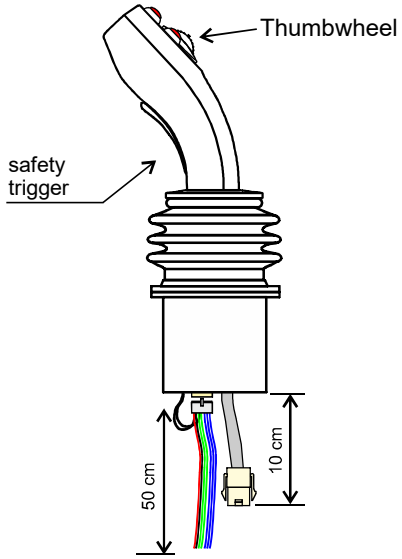


3-axis joystick (type 064)

bottom view

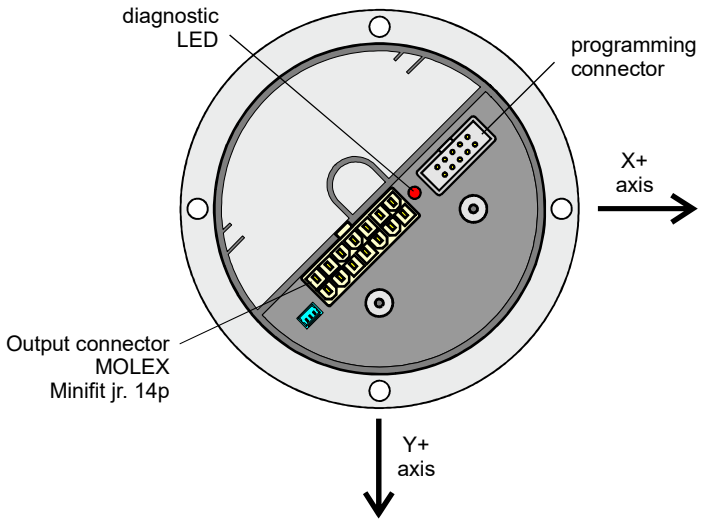

Output signal (V / Vsupply) for each axis

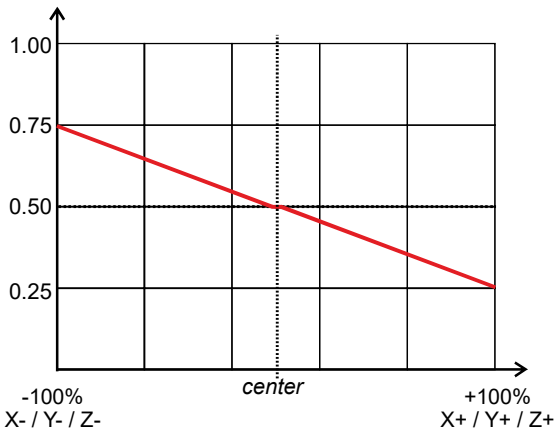

Description:

Output signal range: 25% - 50% - 75% of Vsupply

Curve shape: linear

SET2 used for safety trigger

scanrecofaber	CODICE:	PJS-064-296-004	
DESC:	Manipolatore proporzionale a 3 assi con uscite Danfoss		
FILE:	...\Prodotti\Manipolatori\JS-JP-JC\Mda-JS\Versioni\PJS-064-296-004.cdr		
DATA: 13.10.2025	FOGLIO 1	DI 1	